

FOR SERVICE:

Call the Gevalia Kaffe Import Service at 1-800-438-2542 for further information on repair or replacement of your defective coffee grinder.

1.

Gevalia Kaffe is only available through the Gevalia Kaffe Import Service.

To place an order or obtain additional information, call toll free at:

 
1-800-GEVALIA (1-800-438-2542)

NOTE: To facilitate service and better answer your questions, please have the model number of your Gevalia Coffee Grinder and the date code of manufacture available, when calling. This model information can be located by looking at the rating label found on the bottom of your grinder for the word: 'MODEL'.

This date code information can be located on a sticker next to the rating label on the bottom of your grinder as a 4-digit code.

Printed in China

GEVALIA®
Instruction Manual
Coffee Grinder
Model: GS-GR 4145

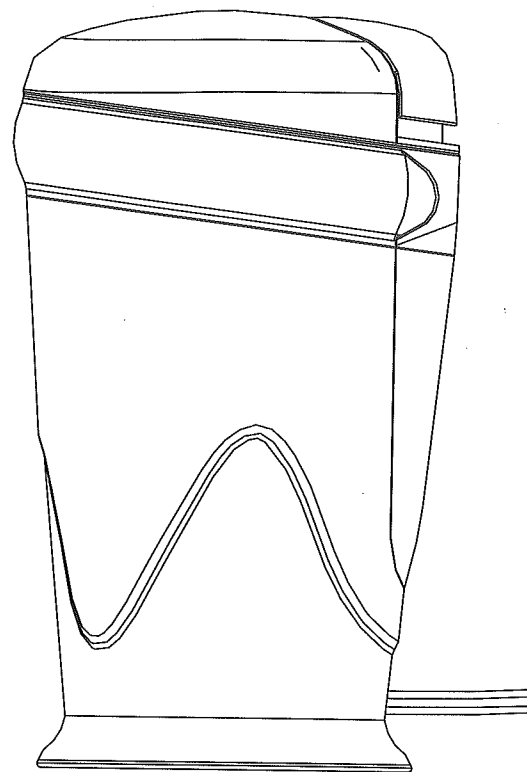

IMPORTANT SAFEGUARDS

1. Read all instructions.
2. Basic safety precautions should always be followed when using electrical products, especially when children are present.
3. **WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING, OR CLEANING IT.**
4. This product is intended for grinding coffee beans to brew coffee for human consumption. Do not use the product for any other purpose.
5. Keep the product out of the reach of children and pets. This product is not intended for use by children. Close adult supervision is necessary when this product is used near children.
6. Do not leave the product unattended while in use. Always unplug the product from the electrical outlet when not in use.
7. Always place the product on a flat, steady, stable surface.
8. Keep the Power Cord and product away from heated surfaces.
9. Do not place this product in or expose it to water or other liquids.
10. Do not use attachments not recommended or sold by the product manufacturer as a risk of fire, electrical shock, or serious personal injury may result.
11. Do not touch moving parts (the grinding blades) while the product is in use.
12. To avoid the risk of serious personal injury or damage to the product, keep hands, hair, other body parts, clothing, and utensils away from the grinding blades while operating the product.
13. Plug the product into a standard 120V AC electrical outlet.
14. Never plug the product into an electrical outlet unless it is completely assembled and the Lid is securely in place.
15. Never activate the coffee grinder without the Lid in place. Do not bypass the safety functions of the Pulse Button.

16. Before removing the Lid, unplug the product from the electrical outlet, and be sure grinding blades have completely stopped.
17. Do not plug or unplug the product into/from the electrical outlet with a wet hand.
18. Do not allow the Power Cord to hang over the edge of a table or counter where it can be tripped over or pulled.
19. When unplugging, always pull the plug from the electrical outlet, do not pull on power cord.
20. Make sure grinder is unplugged from electrical outlet when putting on or removing parts.
21. Never operate this product if it has a damaged Power Cord or if the plug, is not working properly, has been dropped, damaged, or if the Motor Housing has been exposed to water or other liquids. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing.
22. This product is intended for indoor, non-commercial, household use only. Do not use outdoors.

**SAVE THESE INSTRUCTIONS.
FOR HOUSEHOLD USE ONLY**

NOTICE: This product is equipped with a polarized plug (one blade is wider than the other blade) as a safety feature to reduce the risk of electrical shock. This plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug.

 
Do not attempt to defeat the safety purpose of the polarized plug.

NOTE: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

If a longer cord is required, extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the countertop or tabletop where it can accidentally be pulled on or tripped over by children or pets.

Parts Identification

1. Grinder Body/Motor Housing
2. Transparent lid
3. Pulse Button
4. Grinding Area / Blade

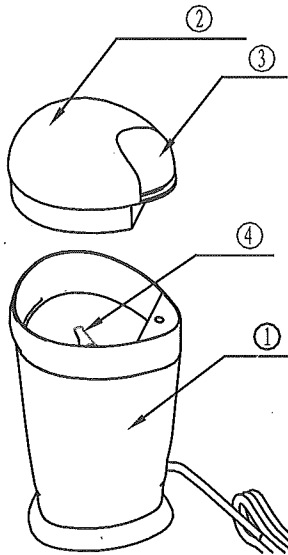

Using the Coffee Grinder

NOTE: Before using the coffee grinder for the first time, thoroughly clean the Lid, the Grinder Body/Motor Housing, and the grinding area (Reference the "Care and Maintenance" section): then thoroughly dry them. Remove any foreign objects or debris from the grinding area before each use.

1. Pour the coffee beans into the grinding area.

NOTE: The coffee grinder has a capacity of 2-1/3 oz (65g). *Do not fill the coffee grinder beyond the brim of the Grinder Area/Blade.

2. Securely attach the Lid onto the Grinder Body.

NOTE: The Lid must be securely in place for the Pulse Button to function.

3. Plug the product into a standard 120V AC electrical outlet.

4. Press and hold down the Pulse Button to begin grinding.

CAUTION: Do not hold down the Pulse Button for more than one (1) minute to avoid overheating the product.

*The grinding time should be about fifteen (15) seconds; however, the grinding time may vary depending on the quantity of coffee beans used.

5. Release the Pulse Button to stop grinding.

CAUTION: Wait until the Blades have completely stopped before removing the Lid or any coffee grounds.

 
6. Scoop the coffee grounds into the coffee filter of your coffeemaker.

7. Unplug the product from the electrical outlet when it is not in use.

Care and Maintenance:

CAUTION: Ensure the product is unplugged from the electrical outlet before cleaning.

- Always clean the product immediately after each use.
- Wash the Lid in warm, soapy water; then rinse and dry thoroughly.
- Wipe clean the inside of the Grinding Area and Grinder Body/Motor Housing with a soft, damp cloth; then thoroughly dry them.

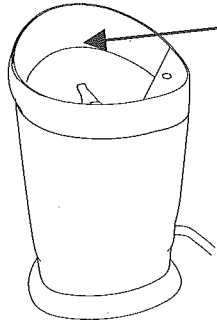

Caution: Grinds may settle/cake where the metal lining meets the plastic body. After each use make sure to wipe clean carefully. We suggest using a small brush to ensure proper cleaning.

CAUTION: Do not immerse the Grinder Body/Motor Housing into water or other liquids.

Do not clean any part of this grinder in a dishwasher. The Grinder Body / Motor Housing and Lid are not dishwasher safe

Do not use abrasive cleaners or scouring pads to clean the product

Do not oil or sharpen the grinding blades.

Store the product in a cool, dry place.

LIMITED WARRANTY

Global Marketing Corp. warrants this appliance shall be free from defects in materials and workmanship under normal home use for a period of one year from the date of purchase or receipt. During that period, defects will be repaired or the product will be replaced at the manufacturer's option without charge. This warranty does not cover damage or failure which results from alteration, accident, misuse, abuse, neglect, commercial use, or improper maintenance as published in our use and care book. Incidental or consequential damages are not covered by this guarantee. Replacements can easily be ordered by calling Gevalia Kaffe Import Service at 1-800-438-2542. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.