

## **IMPORTANT SAFEGUARDS**

**When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:**

1. READ ALL INSTRUCTIONS BEFORE OPERATING OR USING THIS APPLIANCE.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not place cord, plugs, or the appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to our authorized service facility for examination, repair, or adjustment. See warranty for service.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
11. Do not move entire unit when appliance is on.
12. Prior to connecting or disconnecting plug from the wall outlet, turn all controls to "OFF".
13. Do not use appliance for other than intended use.
14. **WARNING:** To reduce risk of fire or electrical shock, do not remove bottom cover. No user-serviceable parts are inside. Repair should be done by authorized personnel only.
15. Scalding may occur if the filter basket is opened during the brewing cycle.
16. Always use cold filtered or bottled water for best results. Warm water or other liquid could cause damage to the coffee maker.
17. Scalding may occur if the water reservoir cover is lifted or removed during the brewing cycle.
18. Any other servicing should be performed by an authorized service representative.

## **SAVE THESE INSTRUCTIONS**

## **OPERATING NOTICE**

To avoid filter basket overflow during brewing:

1. Make sure the filter basket(s) is securely locked in place.
2. Insure both mugs are inserted in the coffee maker with the covers on.
3. To place only one filter paper into the basket(s); insure paper filter doesn't bend or fold. After brewing is completed, there may still be some HOT liquid in the Filter Basket(s). Allow to drain completely and open Filter Basket(s) carefully. Do not move coffee maker immediately after operation.

## **Short Cord instructions**


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

A short power-supply cord is provided to reduce the risks of becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the cord should be arranged so it will not drape over the counter top or table top where it can be pulled on by children or tipped over unintentionally.

## **DESCRIPTION OF YOUR "COFFEE FOR TWO" COFFEE MAKER**

Today everybody seems to be on the go! Or so it seems. That's why we designed the Coffee for Two. It lets you brew your favorite Gevalia coffee directly into one or two travel mugs so you can take your coffee with you. The stainless steel mugs feature insulated stay-cool grips, tight fitting lids to keep coffee hot, and fit most car cup holders. Ingeniously engineered with two independent brewing systems, your Coffee For Two can make one mug, two mugs . . . or any combination of coffee at the same time. Brew decaffeinated on one side, regular on the other side. Brew two types of coffee or two different flavors at the same time. And your Coffee For Two automatically shuts off after brewing. Perfect for active people who want their coffee to go.

# DESCRIPTION OF PARTS

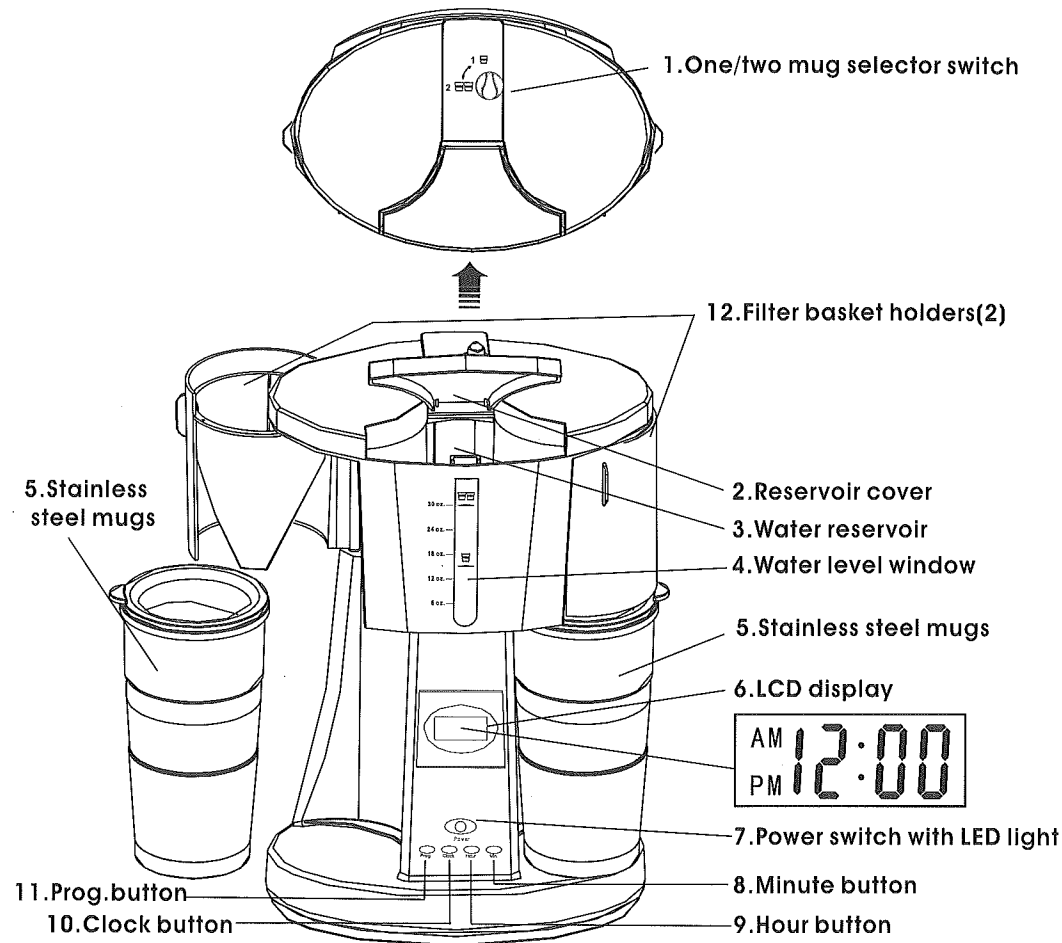

1. One/Two Mug Selector Switch  
Rotate the selector switch to either one or two mugs as desired. When selecting one mug the coffee will brew into the left-hand mug only!
- IMPORTANT: Always place both mugs in the coffee maker when brewing. Even if the selector switch is in the one mug position**
2. Reservoir Cover  
Hinged cover for easy filling.
3. Water Reservoir
4. Water Level Window  
Markings indicate quantity of water needed to brew one or two mugs. When brewing one or two mugs never fill above the appropriate marking level indicated on the water window.

- 1) Left side of water window  
Calibrated to increments of 6/12/18/24/30 ounces
- 2) Right side of water window  
1 Mug-calibrated up to 15 ounces, 2 Mugs-calibrated up to 30 ounces
5. Stainless Steel Mugs  
Travel mugs(2)
6. LCD display
7. Power Switch with LED light
8. Minute button
9. Hour button
10. Clock button
11. Program. button
12. Filter Basket Holders(2)  
Removable for easy cleaning.

## PREPARING COFFEE AND OPERATING YOUR COFFEE MAKER

Before the first use it is suggested that you clean your new coffee maker. Simply run through 2 brew cycles as described below without using coffee or a coffee filter.

1. Place the coffee maker on a hard, flat surface. With the coffee maker turned off, plug into a 120V outlet. The display will show <sup>AM</sup> 0:00 as no time is set. The LED power light will switch to Red.  
NOTE: It is recommended you set the clock to the current time following the directions under "setting the clock".
2. Open the reservoir cover and fill it with cold filtered or bottled water to the appropriate level depending on whether you are making one or two mugs. The float on the water level window indicates the amount of water necessary to brew one mug or two mugs.  
**IMPORTANT:** When brewing one or two mugs NEVER fill above the appropriate marking level indicated on the water window.
3. Rotate the ONE/TWO MUG SELECTOR SWITCH to either the one or two mug(s) setting as desired. Place both mugs into the coffee maker making sure the lids are secure. When selecting one mug the coffee will brew into the left-hand mug only.


**Note: Always insert both mugs into the coffee maker, even when brewing only one mug of coffee.**

For best results, rinse inside of mug(s) with hot water before brewing to optimize the temperature of the coffee.

4. Swing out the left filter basket when brewing one mug or both filter baskets when brewing two mugs. Insert a #2 Gevalia cone filter(s) into the basket(s), folding the seamed edge(s) to insure a snug fit in the basket(s) (D). Always use a fresh filter for each new brew cycle.
5. Place the desired amount of Gevalia Kaffe coffee into one or both filter baskets, corresponding to the number of mugs being brewed. We recommend to use 2 to 3 Gevalia scoops per mug. Gradually adjust the amount of coffee to your personal taste.
6. With both mugs and filter basket(s) in place, press the Power switch button. The LED power light will switch to green during the brew cycle.

- The brew cycle is complete when the water level indicator is empty. The LED power light will switch back to red and the unit will beep 5 times when the brew cycle is complete. Wait for an additional minute until all the coffee has stopped flowing into the mug(s). After coffee grounds have cooled, carefully open the filter basket(s) and discard used coffee filter(s) and grounds. To remove filter basket(s) from the coffee maker (A) grasp the basket handle(s) and swing basket outward, and (B) with the basket(s) fully swung outward, lift up and pull basket(s) off basket hinge(s).(C)

**CAUTION:** Never open the filter basket(s) during the brewing cycle, even if no water is draining from the filter basket(s), since extremely hot water/coffee can spill out and cause injury. If water/coffee is not draining IMMEDIATELY unplug the unit and wait 10 minutes before opening and checking the filter basket(s).

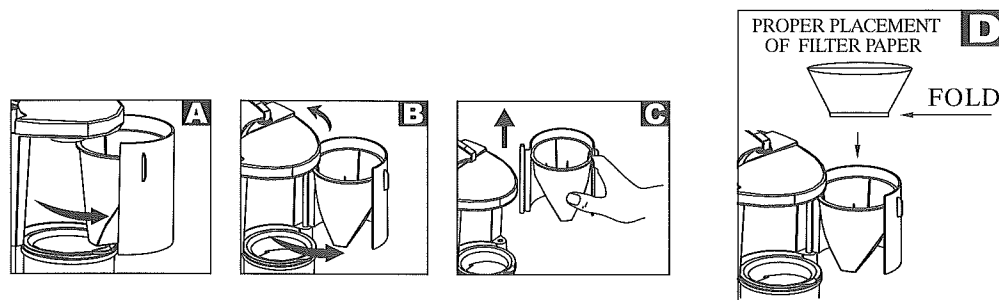

Note: use caution when removing and discarding the used, hot filter paper(s) and used grounds. Rinse filter basket after each brew.

- The brew cycle can be stopped at any time by pushing the Power switch button. The LED power light will switch to red. If the mug(s) are being removed wait a few minutes as coffee will continue to flow until the filter basket(s) are emptied. To restart the brew cycle simply push the Power switch button and the LED power light will turn green.
- The coffee maker is designed to automatically shut off when the brew cycle is completed. You should still unplug the coffeemaker after use.

## SETTING THE CLOCK

- Press the CLOCK button to begin setting the current time. The digits on the LCD display will flash <sup>AM</sup> 0:00 AM=Morning PM=Afternoon/Evening.
- Press the HOUR button repeatedly until the current time is displayed.  
NOTE: Make sure the AM or PM setting is correctly set.
- Press the MINUTE button repeatedly until the current minutes past the hour are displayed.
- Press the CLOCK button and the time setting is complete

## SETTING THE AUTO BREW START TIME

- Follow the directions in “Preparing Coffee and Operating Your Coffee Maker” to prepare the coffee maker for brewing.

.5.

- Ensure the clock has been set up to the current time as described in SETTING THE CLOCK.
- Press the PROG button to begin setting the auto brew start time. The digits on the LCD display will flash.
- Press the HOUR button repeatedly until the desired auto brew start hour is displayed.
- Press the MINUTE button repeatedly until the minutes past the auto brew start hour are displayed. Make sure you have your AM/PM set correctly.
- Press the PROG button and the auto brew start time setting is complete.
- The LED will flash green until the auto brew start time is reached.
- Once the auto brew start time has been reached, the coffee maker will beep 3 times and the green LED will stop flashing and remain continuously lit.
- After the coffee maker has finished brewing, the LED light will switch to red and the unit will beep 5 times.
- To re-set the auto brew start time for the same time for next day simply press the PROG button twice. The LED will flash green to indicate the auto brew time is set.

**Note:** If at any time you decide not to have unit set to a preset time, simply press the POWER button until the LED glows red.

## CLEANING YOUR COFFEE MAKER

**CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or other liquid. To clean the coffee maker body, simply wipe clean with a clean, damp cloth and dry before storing. Never use harsh or abrasive cleaners on any part of the coffee maker. Do not try to clean the inside of the water reservoir with a cloth, this may leave a residue of lint and may clog your coffee maker. Just rinse with cold water periodically. Stainless steel mugs should be washed in warm soapy water and rinsed thoroughly.

**Note:** We do not recommend using the dishwasher to clean the mugs.

## DECALCIFYING YOUR COFFEE MAKER

Calcium build-up frequently occurs in drip coffee makers. This build-up is normal and is caused by minerals commonly found in drinking water. Periodically, your coffee maker will need cleaning to remove any calcium or mineral deposits that may form. You will know when your unit will need decalcifying when you notice an obvious slow down in brewing time. We recommend decalcifying your unit with a solution of white vinegar and cold water. Combine in a container, two tablespoons of white vinegar and 2 mugs of water. Pour into the water reservoir to capacity and follow your normal operating instructions without filters. When the brew cycle is finished, empty the mugs and rinse with water. Refill the reservoir with cold water only and repeat the brew cycle with water only twice more. This will rinse out any remaining vinegar solution. We recommend you do this 4 times a year.

.6.

## LIMITED WARRANTY

Global Marketing Corp. warrants this appliance shall be free from defects in materials and workmanship under normal use for a period of one year from the date of purchase or receipt. During that period, defects will be repaired or the product will be replaced at the manufacturers option without charge. This warranty does not cover damage or failure which results from alteration, accident, misuse, abuse, neglect, commercial use, or improper maintenance as published in our use and care book. Incidental or consequential damages are not covered by this guarantee. This guarantee expressly excludes glass and thermal carafes broken by accident or misuse. However, replacements can easily be ordered by calling Gevalia Kaffe Import Service at 1-800-438-2542. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### FOR SERVICE:

1. Call the Gevalia Kaffe Import Service at 1-800-438-2542 for further information on repair or replacement of your defective coffee maker.

Gevalia Kaffe is only available through the Gevalia Kaffe Import Service.

To place an order or obtain additional information, call us toll free at: 1-800-GEVALIA (1-800-438-2542)

### OR:

2. Call GLOBAL MARKETING CORPORATION at 1-800-969-2518 for warranty information.

NOTE: To facilitate service and better answer your question ,before calling please have the model number of your Gevalia coffee maker and date code of manufacture available. This information can be located by looking at the bottom of your coffee maker. The date code is the 4 digit number next to the words "datecode" .

Printed in China

## CARE AND USE INSTRUCTIONS



COFFEE FOR TWO  
PROGRAMMABLE COFFEE MAKER  
WITH  
STAINLESS STEEL TRAVEL MUGS  
WS-02AT